


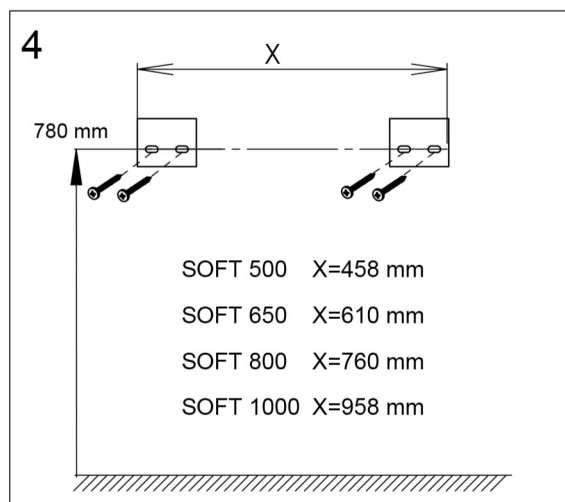
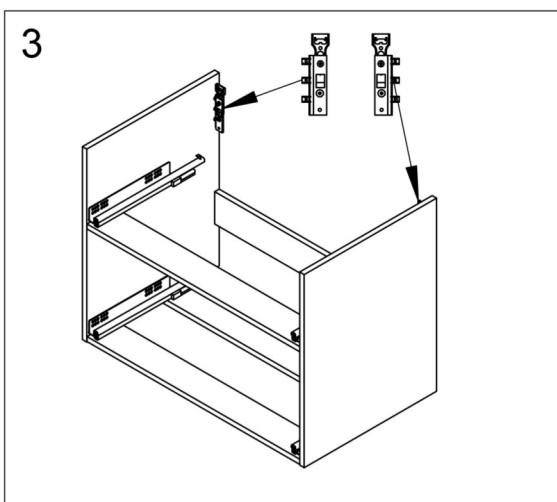
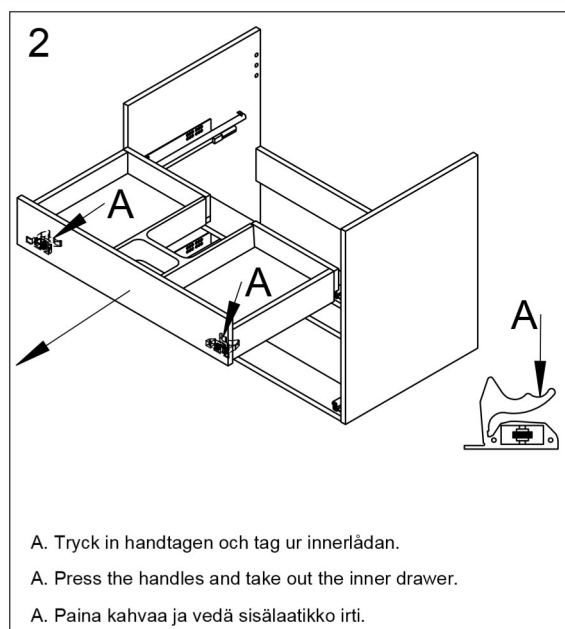
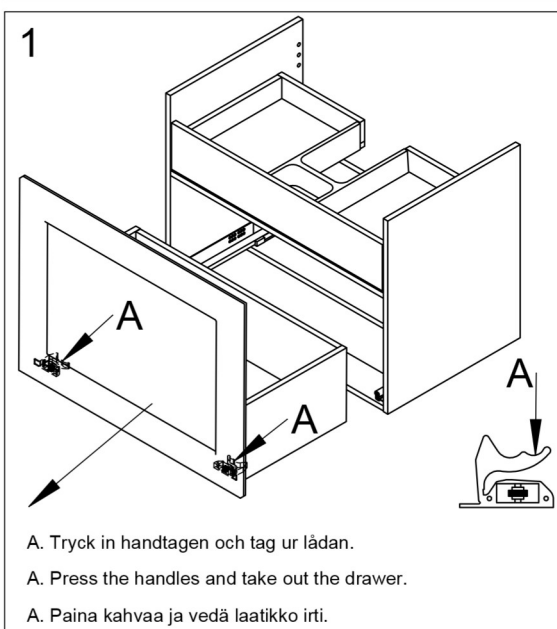
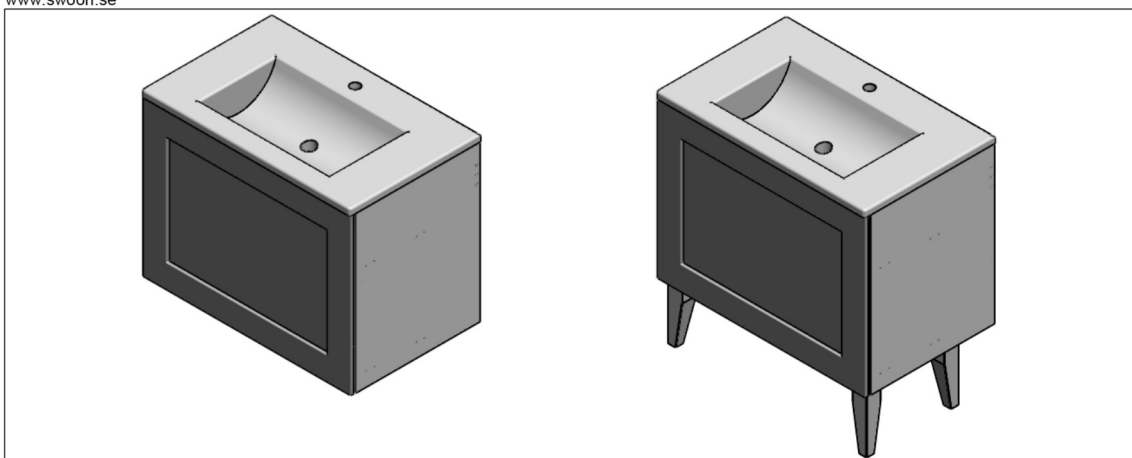
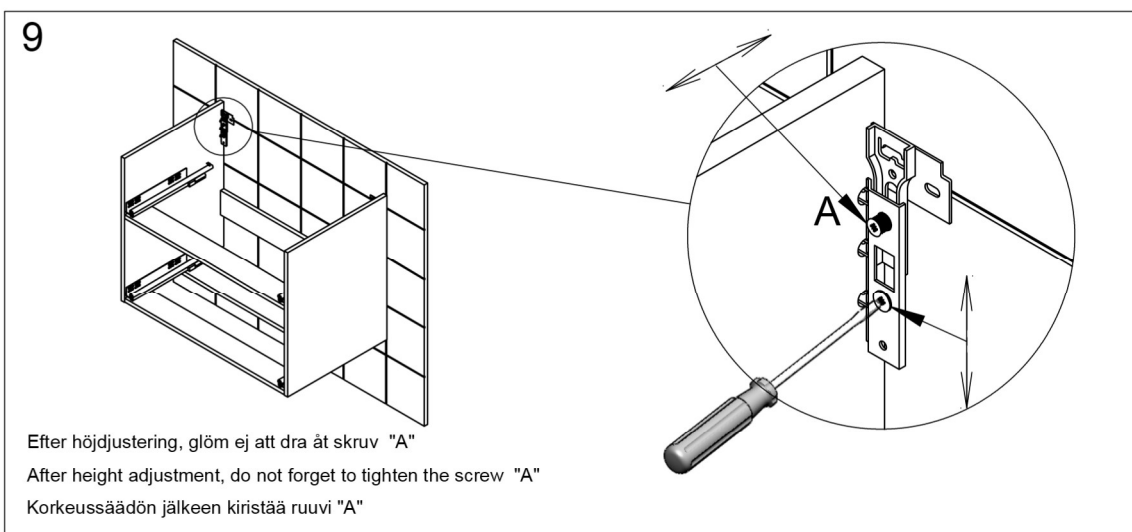
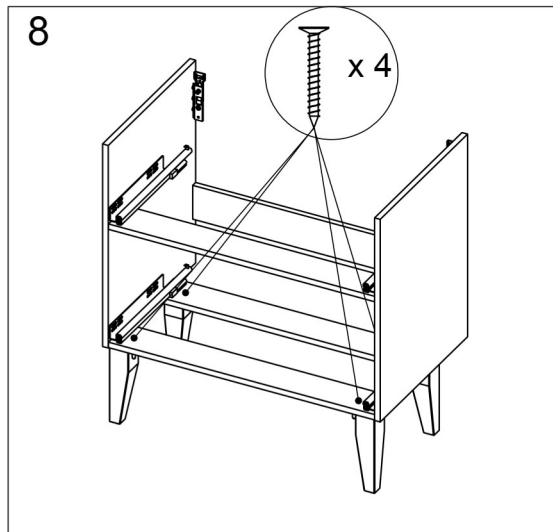
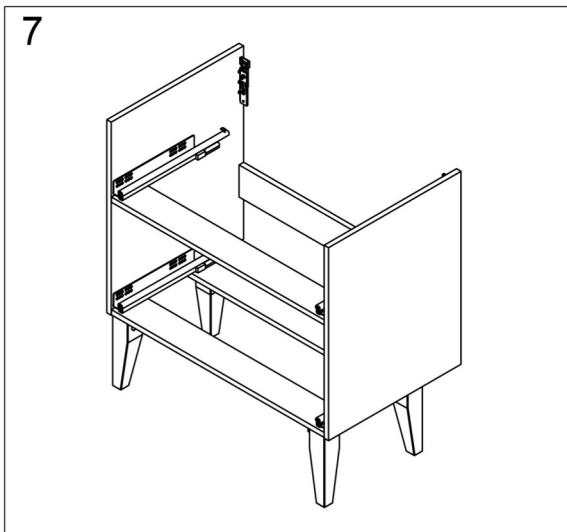
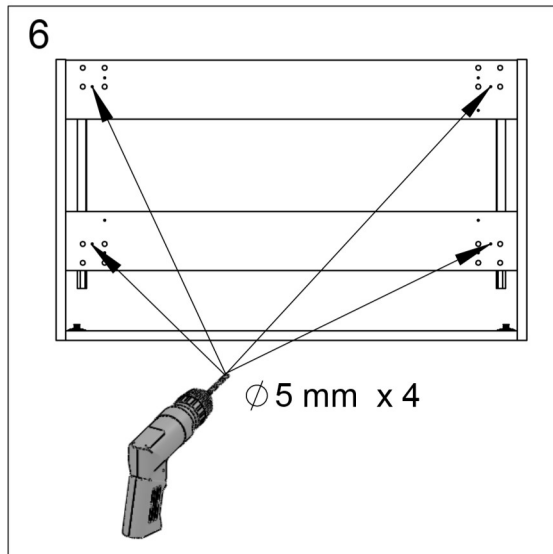
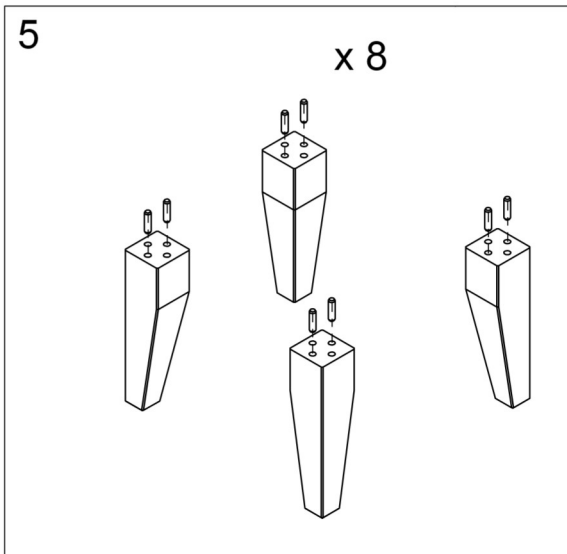
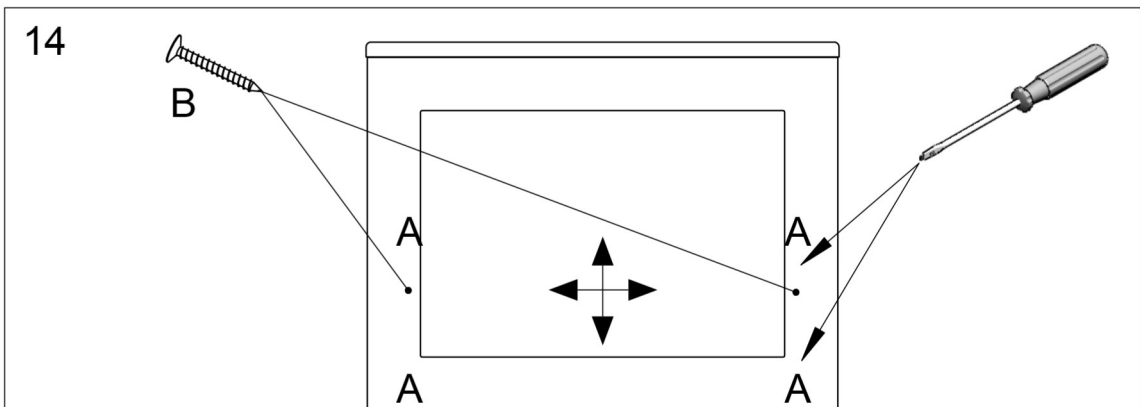
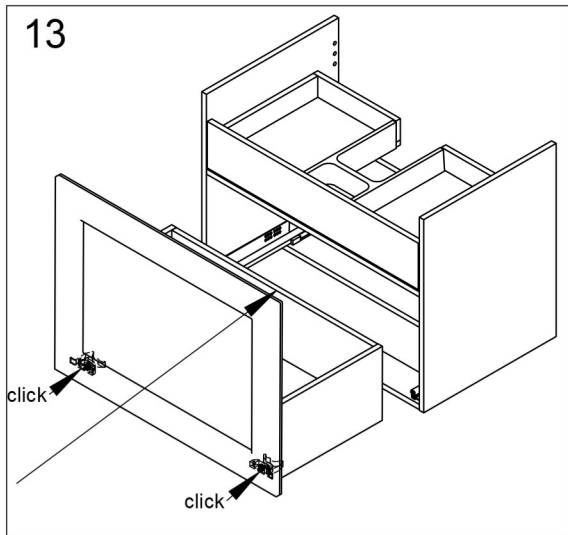


## SWOON SQUARE 500/650/800/1000

Tvättställsskåp/Vanity unit/Allaskaapit

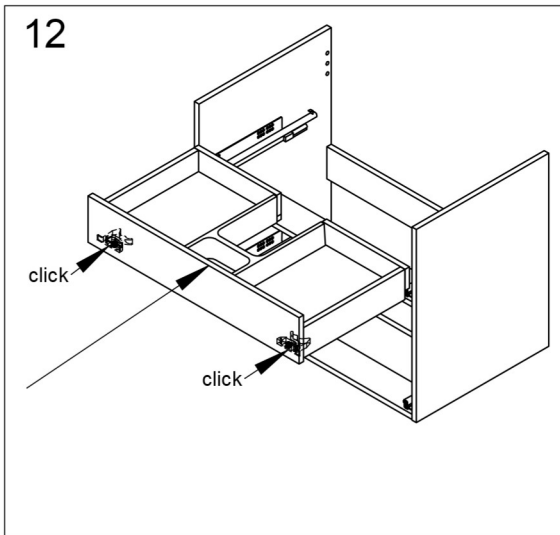

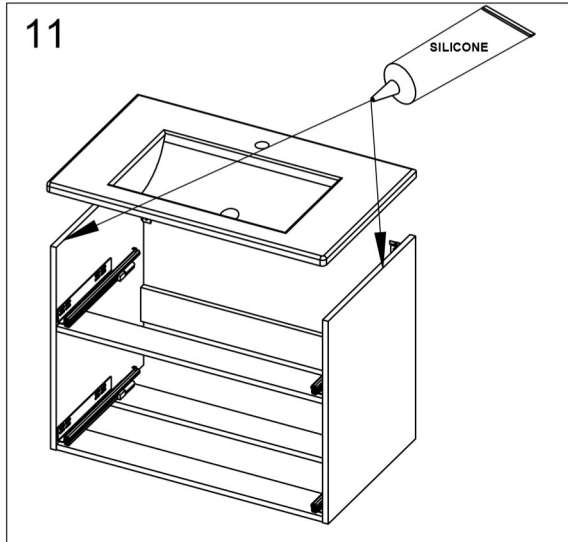

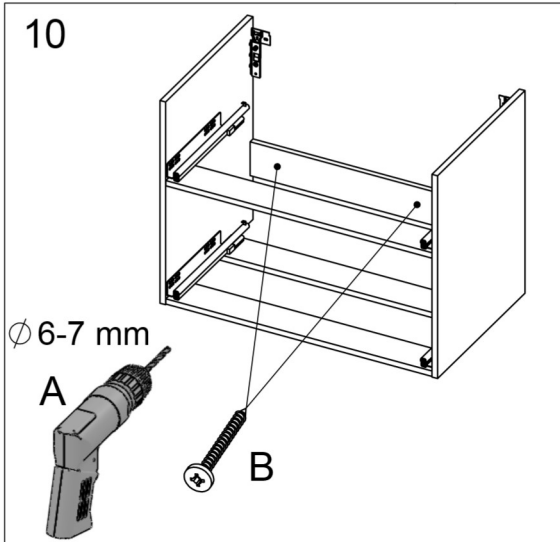

A. Vid behov, finjustera lådfronten.  
 A. If necessary, fine tune the drawer front.  
 A. Tarvittaessa säädä laatikonpäättä.

Efter justering, säkra lådfronten med skruv "B"  
 After adjustment, secure the drawer with screw "B"  
 Säädön jälkeen varmista säätö ruuvilla "B"